



1612 N Broad Street
Lansdale, Pa 19446
(215) 362 - 7368

44 W Ridge Pike
Limerick, Pa 19468
(610) 489 - 2334

Snow Cone Machine Operating Instructions

THIS UNIT REQUIRES 20AMPS. DO NOT USE MORE THAN 25' #12 EXTENSION CORD WHICH MUST BE GROUNDED TO THE RECEPTACLE.

SHAVING ICE:

1. Fill the ice horn with ice
2. Press and hold the "MOTOR" switch to activate blades and begin shaving ice.
3. While holding "MOTOR" switch down, apply steady downward pressure to the ice pusher
4. Release the "MOTOR" switch when finished.
5. Repeat steps 2 – 5 for additional batches.

CLEANING:

1. Remove all ice from the ice horn and storage compartment.
2. Operate the motor for a few minutes to remove any water collection on the cutter head.
3. Unplug the power cord from the electrical outlet. Do not pull from the cord.
4. Using a clean cloth wipe down the inside and outside of the unit.

FAQ:

How much ice will I need?

1/2lb of ice will make a 6oz snow cone.

How much syrup should I use to flavor my snow cone?

One 6oz snow cone will take 2 ounces of syrup. Cones will not hold more than that.

Can I use block ice to make snow cones?

You can use block ice to produce snow cones if you first break it down into pieces 3-4 inches in size.

Ice will not fit in the horn if the pieces are too large.