



1612 N Broad Street
Lansdale, Pa 19446
(215) 362 - 7368

44 W Ridge Pike
Limerick, Pa 19468
(610) 489 - 2334

Coffee Maker Instructions

30, 36, 55 and 100 Cups


BEFORE YOU USE THIS PERCOLATOR PLEASE READ BELOW:

- NEVER operate without water. Unit has a safety cut-off switch that will turn off if it is plugged in without water with the switch in the on position. If unit turns off, wait 30 minutes to operate as safety switch needs to rest.
- Make sure stem is positioned correctly in the unit's heating well.
- This unit is not recommended to be used as a water boiler. If you are going to boil water make sure you have the stem and basket in place before you turn the unit on.
- When there are only about 3 cups left in the unit please turn the power switch off and unplug the cord from the electric outlet.

Instructions

30, 36, 55 and 100 Cups

Operating Instructions:

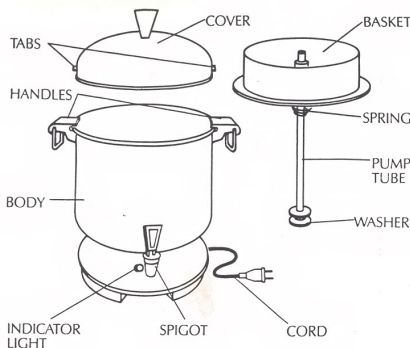

1. Remove cover and basket. Check to see that spigot is closed. Fill urn with cold, fresh tap water – fill according to markings on inside of urn for of cups desired. Use cold tap water – the automatic brewing cycle is timed begin with cold water.

| CUPS TO BE BREWED | AMOUNT OF GROUND COFFEE TO USE* |
|-------------------|---------------------------------|
| 12 | 1¼ cups |
| 18 | 1¾ cups |
| 24 | 2½ cups |
| 30 | 3 cups |
| 36 | 3½ cups |
| 42 | 4 cups |
| 48 | 4½ cups |
| 55 | 1 pound can |

1 cup brewed coffee = 5 fluid ounces.
*Use standard measuring cups.

2. Wet coffee basket to help keep small particles of coffee from sifting through. Add desired amount of regular or percolator grind coffee to basket and place on the pump tube. Pump tube must be resting in center well. The following charge suggests amount of coffee to use for medium brew, amount can be varied to suit personal taste and particular coffees.

Replace urn cover and secure into position by turning cover clockwise until cover tabs fit into handle slots.

3. Plug into standard household 120 volt AC wall outlet.

NOTE: Use one designated circuit per coffee maker. Failure to do so may result in malfunction of the coffee maker. The unit is equipped with a Ground Fault Interrupter (GFI). It may be necessary to push the reset button in order for coffee maker to begin brewing.. Plugging in coffee maker AFTER the water and coffee are added.

4. When coffee brewing is completed percolating will stop and the red indicator light will come on. The urn automatically switches to “keep warm” settings to preserve fresh tasting coffee at hot, ready to serve temperature. For best flavor remove the coffee basket and pump tube when brewing is completed. **REMOVE PARTS CAREFULLY – PARTS ARE HOT.**

Cleaning Instructions:

ALWAYS make sure plug is removed from wall outlet. Let urn cool. Remove cover, coffee basket and tube carefully – grounds and remaining coffee may still be warm.

Wash urn with water and detergent – NEVER IMMERSSE BASE OF URN.

The cover, basket and pump tube (with spring) may be placed in the dishwasher. NEVER wash urn body in dishwasher. Rinse all parts thoroughly and dry.