Funhouse Bounce



3221 San Fernando Rd, Los Angeles, CA 90065 tel: 800-888-8148 web: www.ninjajump.com e-mail: info@ninjajump.com

OWNER'S MANUAL SAFETY RULES READ AND SAVE THESE INSTRUCTIONS



1612 N Broad Street Lansdale, Pa 19446 (215) 362 - 7368

44 W Ridge Pike Limerick, Pa 19468 (610) 489 - 2334

SET UP


Set up, installation, deflation and handling should be done by a QUALIFIED ATTENDANT ONLY.

The inflatable may weigh over 200 lbs. Caution should be exercised when lifting and handling the equipment. Use a dolly to move the equipment.

- 1. **DO NOT** set up when windy and or it rains.
- 2. Select a level area that is a safe distance from water, walls and other obstructions.
- 3. Make certain that there are no overhead utility wires and ground obstacles such as protruding sprinklers or underground pipes of any kind before laying the protective tarp on the selected area.
- 4. Place the inflatable in the middle of the tarp and unroll the unit after removing the straps.



5. Connect either tube snugly (choose the one closest to the electricity source) to the blower using the strap attached to the tube. Make sure that all intake openings of the blower are free from any obstructions.

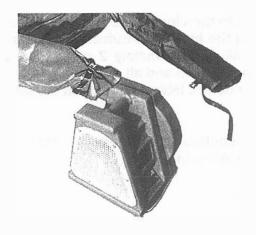

DEFLATION PROCEDURES

- 1. Make sure there are no children inside or around the Ninja Jump unit before you turn the switch off and unplug the blower.
- 2. Disconnect the air tube from the blower, until the second air tube and zippers (if any). Let both air tubes lie parallel to each other so the air can escape freely.
- 3. As the Ninja Jump unit deflates, arrange the columns to fall on top of the base making sure that the deflated unit is evenly spread out.




4. Standing in front of the Ninja Jump unit (Entrance), fold the left side and the right side so that they meet in the middle and then fold one side over the other.






5. Roll the Ninja Jump unit towards the air tubes and then tuck the air tubes into the roll.



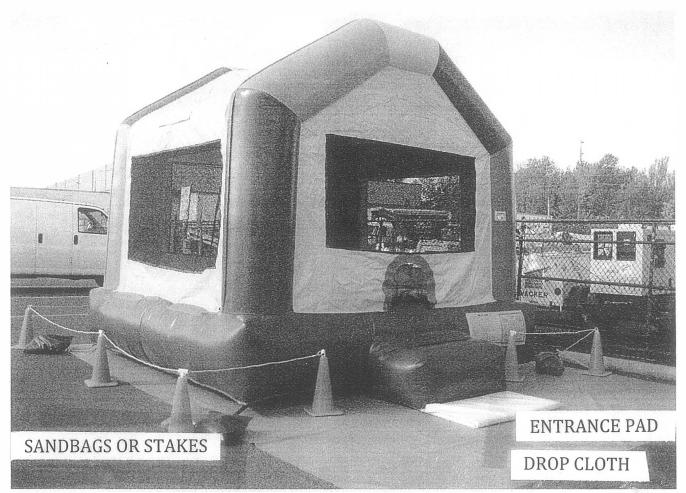

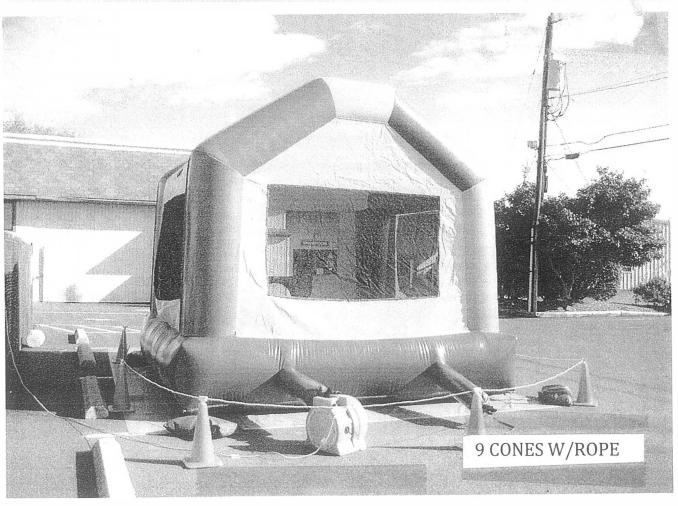

FUNHOUSE 13X13