



1612 N Broad Street
Lansdale, Pa 19446
(215) 362 - 7368

44 W Ridge Pike
Limerick, Pa 19468
(215) 489 - 2334

BIG 60 II STOVE “STEAMER / COOKER” INSTRUCTIONS

PLEASE READ PRIOR TO USE

SETUP:

1. This is designed **FOR OUTDOOR USE ONLY**.
2. Place the utility stove on a sturdy, level, non-combustible surface that is capable of safely supporting the weight of the stove and accessories.
3. Securely connect regulator to propane cylinder and test for leaks according to the instructions in the **PROPANE SAFETY** section of this page.

OPERATING INSTRUCTIONS:

1. This is designed **FOR OUTDOOR USE ONLY!**
2. Prior to lighting the utility stove, place all control knobs in the "**CLOSED**" position as marked on the control panel.
3. Open main cylinder valve. Hold a lit butane gun next to a burner and turn the far right control knob to "**ON**". The burner will ignite instantly. The second and third rings will instantly light by simply turning their control knobs to "**ON**".
4. Each burner ring is individually operated by its own control knob. Any combination of ring use or temperature setting is possible.
5. When finished cooking, disconnect the propane cylinder from the stove and store according to the instructions in the **PROPANE SAFETY** Section of this page.

CARE & CLEANING:

Clean with mild detergent or soap.

PROPANE SAFETY

- Never use or store cylinders indoors.
- Keep cylinders away from heat. Do not smoke while handling or transporting cylinders
- Always keep cylinders upright and when transporting secure them in position.
- Keep main cylinder valve securely closed when not in use. **WARNING:** Propane tank valves are designed to work completely open and/or completely closed. Never just crack the valve.
- Always position the LP cylinder so that the connection between the valves and the regulator will not cause sharp bends in the hose.
- The POL connector on the regulator screws in to the valve outlet of a 30 lb. cylinder, by turning counterclockwise (to the left) only.
- Make sure the connector is free from scratches or nicks which can cause leaks.
- There are two (2) types of connectors (see Diagram A and Diagram B)

- **DISCONNECTING AND TRANSPORTING CYLINDERS FOR REFILLING:**
 1. Turn off all control knobs and close the main cylinder valve.
 2. Place cylinder plug snugly in the main cylinder valve outlet.
 3. Always transport and store LP cylinders in a secured, upright position.
 4. Never keep propane cylinders in a hot car or truck. Heat could cause the relief valve to discharge propane and create a dangerous situation.
- **RECONNECTING A FILLED 20 lb. CYLINDER:**
 - Remove the main cylinder valve plug.
 - Thread the POL Connector snugly into the main cylinder valve by turning counterclockwise (to the left).
 - What you do next depends on whether you have a soft nose connector with a rubber ring or a hard nose connector:
- **WITH A SOFTNOSE CONNECTOR (DIAGRAM A):**
 If there is a handwheel, tighten firmly by hand, or use a wrench. **DO NOT OVERTIGHTEN.** The rubber O ring must be in place on soft nose POL connectors, otherwise it may not seat and form a good seal.
- **WITH A HARDNOSE CONNECTOR (DIAGRAM B):**
 Use 8" adjustable wrench. Tighten firmly but do not use excessive force.
- Always test for leaks according to the diagram below.
- If you suspect a problem, have your grill or tank serviced by a qualified propane dealer.

